

OutdoorAudio

DeckTunes® Two Remote Control Battery Replacement




Outdoor Audio, Inc.
4250 Keith Bridge Road - Suite 270
Cumming, GA 30041
Toll-Free: 800-240-6845
Support@OutdoorAudio.com
www.OutdoorAudio.com

THANK YOU FOR YOUR BUSINESS. IF YOU ARE NOT COMPLETELY SATISFIED WITH YOUR PURCHASE FOR ANY REASON, PLEASE CONTACT US IMMEDIATELY.

Our entire purpose as a company is to create great products at affordable prices that our customers love.

Items Needed

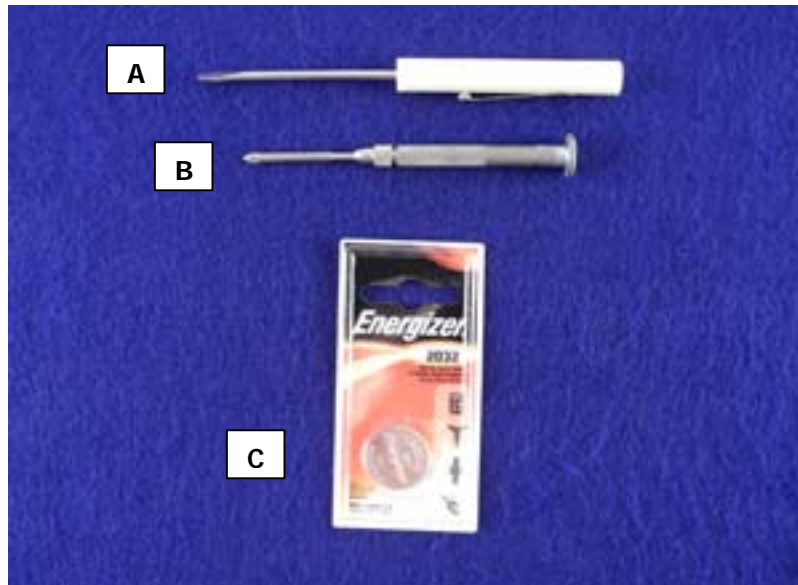

Item	Description	Qty
A	Small Flat Blade Screwdriver	1
B	Small Phillips Blade Screwdriver	1
C	CR 2032 Button Cell Battery	1

STEP ONE - SEPARATE REMOTE CONTROL FROM HOLDER



Grasp top round part of remote and twist while pulling to separate the remote from the holder.

STEP ONE - CONTINUED



Remote Control Separated from Holder

STEP TWO - REMOVE COVER FROM BACK OF REMOTE CONTROL



Insert the blade of a small flat screwdriver under the edge of the rubber cover on the back of the remote control and gently pry it upwards.

STEP TWO - CONTINUED



Using your fingers, gently pry the rubber cover completely off of the back of the remote control.



Rubber Cover Separated from Remote Control

STEP THREE - OPEN BATTERY COVER



Using a small Phillips screwdriver, carefully remove the three screws from the battery cover.




Screws and Battery Cover Removed

STEP FOUR - REMOVE AND REPLACE BATTERY



Using the blade of small flat screwdriver, gently pry battery upwards and out of remote control.

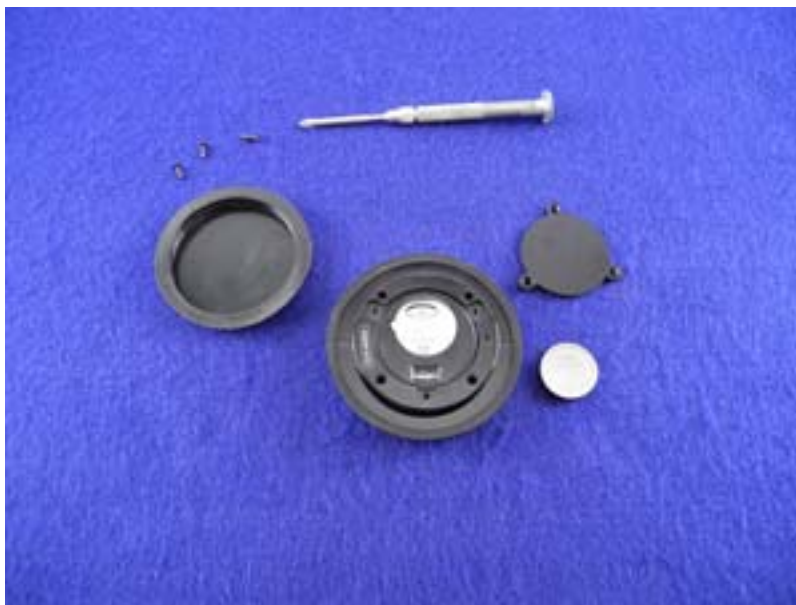

Remote Control with Battery Removed

STEP FIVE - REPLACE BATTERY

Simply insert a new battery into remote and follow steps in reverse order to complete the process.